

PORRAS12 UP K






max 12 mm



special application



architectural

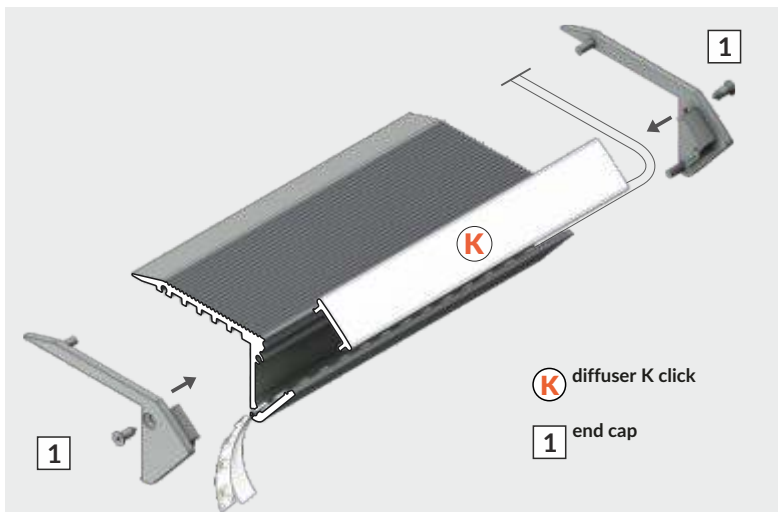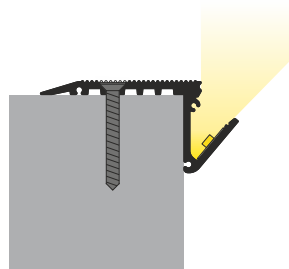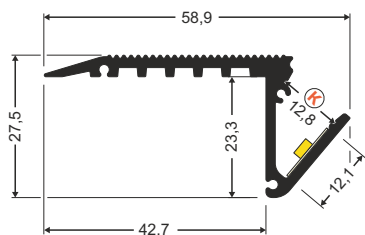

scissors



drill



hacksaw



screwdriver



pliers




soldering iron




solder

I

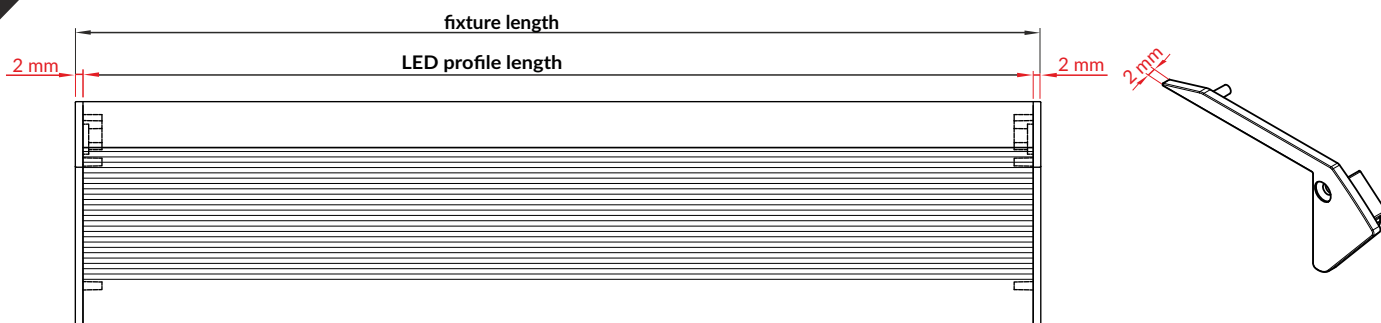


II

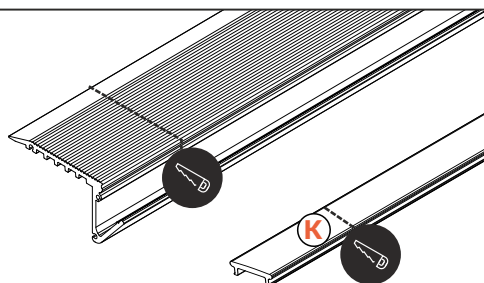


The length of the diffuser is equal to the length of the profile

III

Mounting screw hole
Notice: select the right screws for your surface
Recommended screws spacing: 50 cm

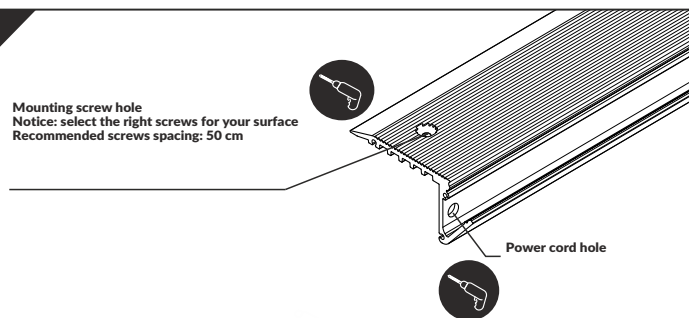


IV

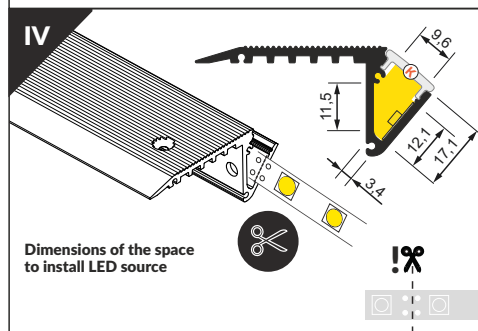


Dimensions of the space to install LED source


V

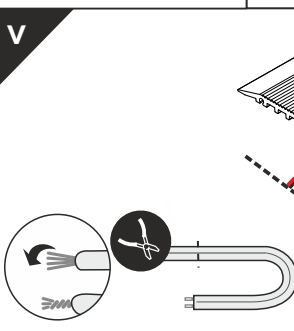


VI

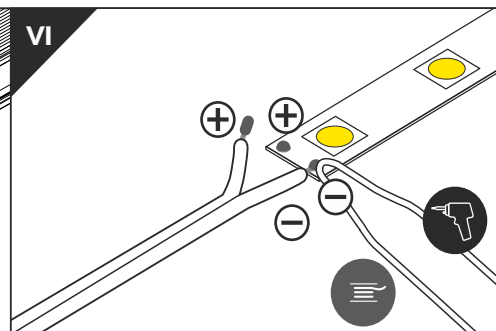


VII

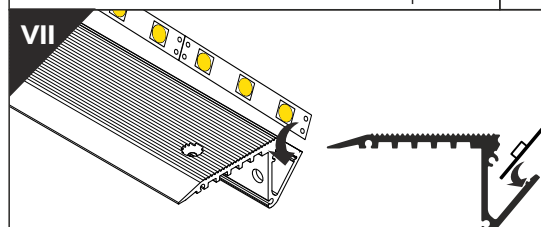


VIII

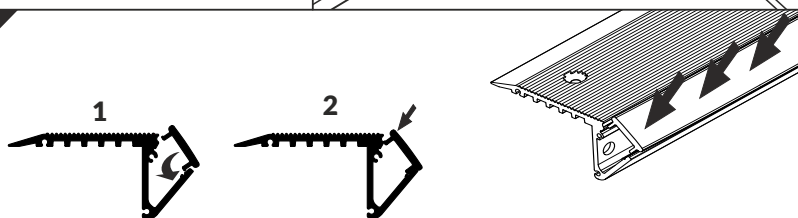

IX

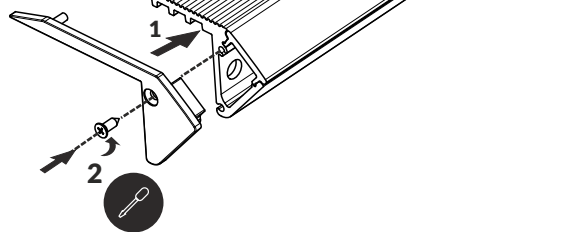


XI

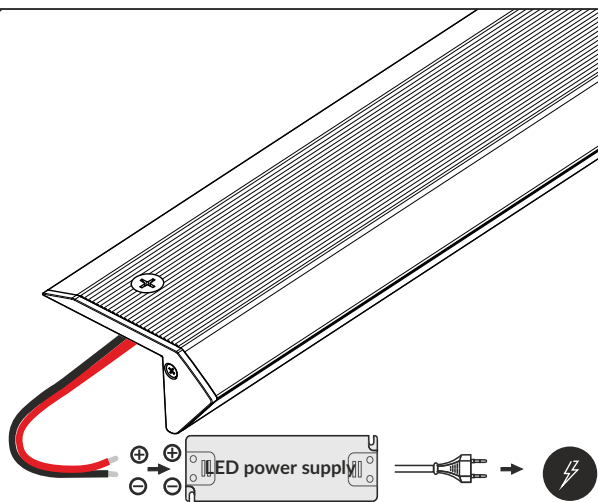

X

MOUNTING

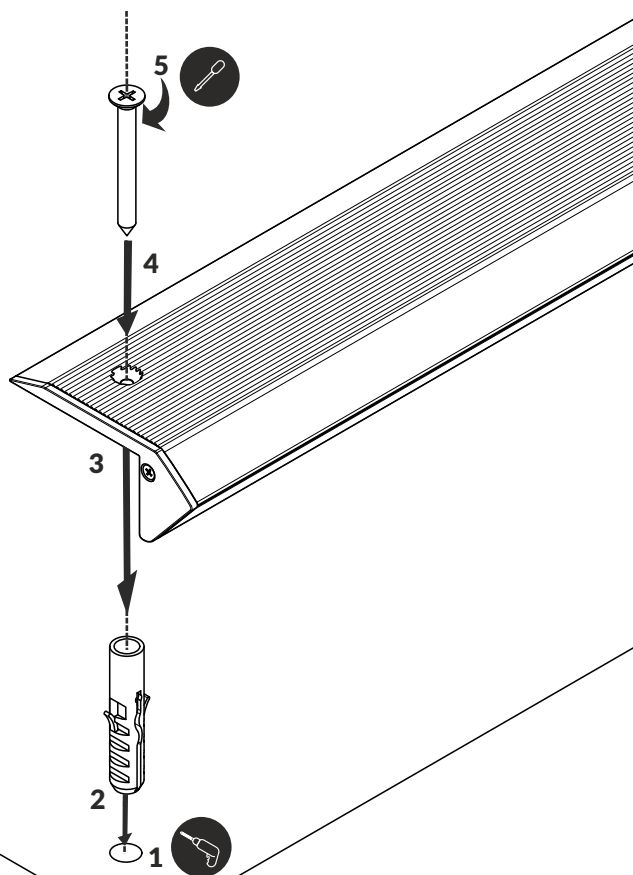

VALOTEHDAS